

COMPANION

OWNERS MANUAL

EZYWASH PORTABLE TWIN TUB WASHING MACHINE

Part No. COMP434



AUSTRALIA'S ORIGINAL OUTDOOR BRAND

INDEX

Important	3
Understanding your Appliance	4
Specifications	4
Installation	5
Power Requirements	5
Advice and Tips before Washing	5
Sort your Laundry	5
Clothing	5
Washing Guide	6
Washing	6
Draining	8
Rinsing	9
Spin Drying	10
Maintenance and Storage	11

IMPORTANT

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance shall not be exposed to rain.
- This appliance should be located on a solid surface in a well ventilated area away from any sources of combustible material and gases.
- The ventilation openings in the base **MUST NOT** be obstructed by carpet or similar products.
- Keep the appliance in a shaded environment. Do not expose to direct sunlight for extended periods and keep away from external sources of heat.
- The temperature of water used in the appliance should not exceed 45 degrees centigrade as this may result in damage to the internal tub of the unit.
- Only use washing powder that is suitable for **FRONT LOAD** washing machines, as this produces less suds and is more suited to this appliance.
- Do not place heavy articles on the lid of the appliance as this may result in damage to the unit.
- This appliance is designed to be used only with fabric articles and must not be used with solid objects or articles. Only clothing, manchester and the like is to be used with this appliance.
- Do not move or relocate the appliance when operating, containing water or clothes. Ensure that the unit is empty and disconnected from the power source before moving.
- Do not place hands in the appliance while operating. Ensure that the unit is switched off prior to filling or removing articles.
- When storing ensure that all water has been removed from the tubs and that they are dry and free of clothes or articles.

CAUTION: If this appliance is supplied from a cord extension set or electrical portable outlet device, the cord extension set or electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.

UNDERSTANDING YOUR APPLIANCE

CYCLE SELECTOR

SPIN TIMER

WASH TIMER

SPIN LID

WASH LID

DRAINAGE HOSE



SPECIFICATIONS

Size	362(l) x 560(w) x 650(h) mm
Weight (Empty)	12kg
Max Washing Capacity	2.0kg
Rated Voltage	240V AC/50Hz
Rated Power	240W wash / 120W spin
Outer Casing	ABS plastic
Inner Casing	ABS plastic
Drain Pipe	460mm

INSTALLATION

It is important that your appliance is installed and operated in accordance with the manufacturer's instructions.

POWER REQUIREMENTS

This appliance is designed to be operated on AC input only, voltage is required to be 220-240V AC at 50Hz.

To ensure correct operation of your appliance read and understand the instructions fully prior to using the machine.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified persons in order to avoid a hazard.

ADVICE AND TIPS BEFORE WASHING

- Use washing powder or liquids suitable for front load machines only
- Washer capacity – 2.0kg
- Maximum water temperature – 45°C

SORT YOUR LAUNDRY

Sort items according to how soiled they are, colour and material.

CLOTHING

- Read all labels and manufacturer's washing instructions prior to washing.
- Do up zips so they do not harm fabrics.
- New coloured items may contain excess dye and should be washed separately for the first few times.
- Turn delicate items inside out or use a wash bag.
- Empty pockets and wash them inside out if possible.

WASHING GUIDE

CLOTHING TYPE	WASH/RINSE TIME	SPIN TIME
Delicates	3-5min	1-2min
Cotton and Synthetics	5-9min	3-5min
Towels and Sheets	12-15min	4-5min
Heavy Soiled	12-15min	4-5min

WASHING



- Step 1.** Position appliance in a suitable location.
Step 2. Connect to suitable AC outlet.



- Step 3.** Ensure the drain pipe is located in its correct position on the side of the appliance. Ensure the lint remover is securely clicked into compartment inside of washing machine tub prior to use.



OWNERS MANUAL



Step 4. Lift the lid and half fill tub with water via either the water inlet located on the top of the appliance (A) or directly in to the tub (B), taking care not to allow water to flow over the control panel. The detergent packaging will give a recommendation about how much detergent you should use based on the amount and level of soiled clothing that is to be cleaned. Water should not be added to spin compartment (smaller compartment).



Step 5. Place articles in the tub and complete filling the tub with water, ensuring that the water level inside the tub does not exceed the top of the lint remover compartment.





Step 6. Select the required washing level – Normal or Gentle.



Step 7. Rotate the timer in a clockwise direction to select the length of time, in minutes, that is required. See the Washing Guide to set the correct time.

DRAINING



Step 1. Once the appliance has completed the washing cycle ensure that the drain pipe is located in a suitable position.

Step 2. Rotate the Cycle Selector switch in a clockwise direction and select Drain.



Step 3. Allow all water to drain away from the appliance.

Step 4. Remove washing from the tub remembering to squeeze out excess water from the articles.

OWNERS MANUAL


RINSING



Step 1. Rotate the Cycle Selector in an anti-clockwise direction and select Normal.



Step 2. Half fill tub with water via either the water inlet located on the top of the appliance (A) or directly in to the tub (B).

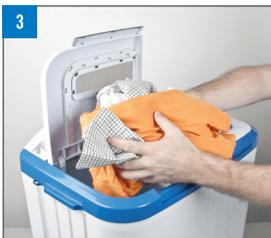

Step 3. Place articles in the tub and complete filling the tub with water to the required level mark – Do not use washing liquid or powder.



Step 4. Rotate the timer in a clockwise direction to select the length of time, in minutes, that is required. See the Washing Guide to set the correct time.

Step 5. Repeat the Draining Operation.

SPIN DRYING



Step 1. Open the External and Internal lids of the spinning tub and remove the plastic spin disc. Note: It is important that the spin disc is used every time so as to allow correct operation of the spinner tub.



Step 2. Place a selection of articles in the spinning tub and insert the spin disc.



Step 3. Rotate the Cycle Selector switch in a clockwise direction and select Drain.



Step 4. Close both lids and rotate the spin timer in a clockwise direction to select the desired spinning time. See the Washing Guide to set the correct time.



Step 5. Open the External and Internal lids of the spinning tub and remove the plastic spin disc.



Step 6. Rotate the Cycle Selector in an anti-clockwise direction and select Normal.

MAINTENANCE AND STORAGE

The appliance is fitted with a lint collection point that must be cleaned regularly.



Step 1. Drain all water from the appliance and remove the filter.

Step 2. Wash down with clean water and then replace.

With the appliance disconnected from the AC input all external surfaces can be cleaned with warm soapy water taking care not to allow too much water to enter the control panel. Do not use abrasive cleaners or bleach.

Do not submerge the appliance in water.

When storing for periods of time, flush out washing and spinning tub with clean water then allow to dry completely before storing away.

WARRANTY - For details see www.companionleisure.com.au/warranty

Companion® is a registered trademark of
Primus Australia Pty Ltd

Designed & Imported by:
Adventure Trading Australia Pty Ltd
71 Charles Ulm Place,
Eagle Farm, QLD 4009
AUSTRALIA

Made in China

